

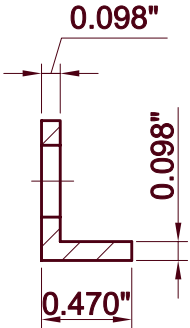


9002 SCREEN DOOR LATCH


#6 × 1/8" WOODSCREW
2 PLACES

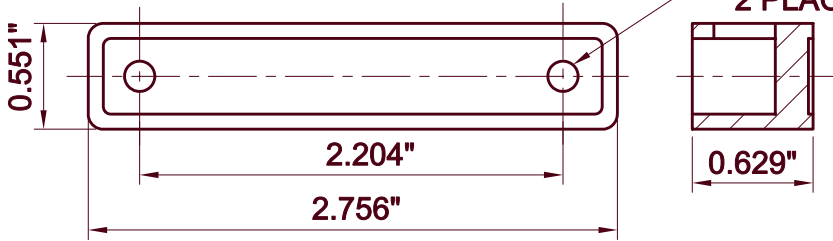

#6 × 3/4" BRASS
SELF TAPPING SCREW
2 PLACES

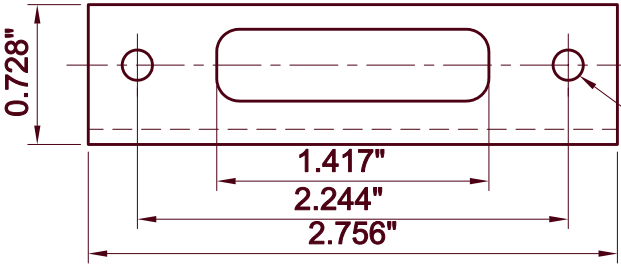

#6 × 1/8" WOODSCREW
4 PLACES

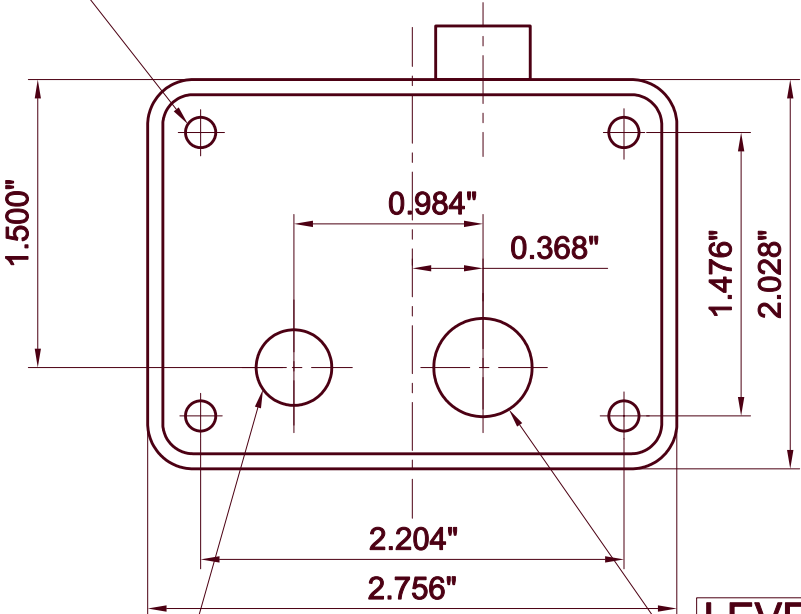

TURN PIECE HOLE
DRILL 1/2" HOLE
5/8" DEEP

LEVER/KNOB HOLE
DRILL 11/16" HOLE
COMPLETELY THROUGH



REV:2005-9-10

PHONE: 1-800-646-6888
FAX: 1-800-646-8988
email: info@vonmorris.com
http: //www.vonmorris.com